



Photo: DJV182

- Ergonomically designed handle with soft grip**  
Provides comfortable grip and more control while minimizing hand fatigue and pain.
- Powered by 14.4V/ 18V Li-ion batteries**
  - High power density allows compact and lightweight tool design without power loss.
  - Can be charged at any time because Li-ion battery is free from memory effect.

**Variable speed control by dial**  
located on the rear side for easier operation

**Newly designed dust nozzle**  
Dust nozzle can be set to Base firmly with Thumb screw.



Dust nozzle can be attached over the sawdust exhaust port for connection to Makita vacuum cleaner.

- Blower function** keeps the cut line clean.
- Soft start** allows for accurate landing of the blade on the surface of workpiece in various applications.
- Soft no load speed** reduces the blade stroke at a no load speed of 3,500rpm (highest speed mode) for easy trace of cutting line.
- Rigid aluminum base** bevels 0 to 45° left and right.
- 3 Orbital settings + Straight cutting**  
Optimum cutting action can be selected by simply turning the change lever.
- Cover Plate**  
Protects workpiece from scratches

**Battery & Charger Time Reference Chart (in Minutes)**

DJV141, DJV142		DJV181, DJV182		DC18RC / DC18RA	DC18SF	DC18SD	DC18SE (Automotive)
BL1840 4.0Ah	BL1440 4.0Ah	BL1830 3.0Ah	BL1430 3.0Ah	36min. Fast Charging	90min. 1 to 2 batteries 180min. 3 to 4 batteries	90min.	
BL1815N 1.5Ah				22min. Fast Charging	60min. 1 to 2 batteries 120min. 3 to 4 batteries	60min.	
				15min. Fast Charging	30min. 1 to 2 batteries 60min. 3 to 4 batteries	30min.	

**Cordless Jig Saw DJV141 / DJV181 / DJV142 / DJV182**

	DJV141	DJV181	DJV142	DJV182
<b>Capacity</b>	Wood : 135mm (5-5/16") Steel : 10mm (3/8")	Wood : 135mm (5-5/16") Steel : 10mm (3/8")	Wood : 135mm (5-5/16") Steel : 10mm (3/8")	Wood : 135mm (5-5/16") Steel : 10mm (3/8")
<b>Length of stroke</b>	26mm (1")	26mm (1")	26mm (1")	26mm (1")
<b>Strokes per minute (spm)</b>	800 - 3,500	800 - 3,500	800 - 3,500	800 - 3,500
<b>Dimensions (L x W x H)</b>	280x77x189mm (11"x3"x7-7/16")	298x77x189mm (11-3/4"x3"x7-7/16")	264x77x208mm (10-3/8"x3"x8-3/16")	266x77x208mm (10-1/2"x3"x8-3/16")
<b>Net Weight*</b>	2.4kg (5.3lbs)	2.5kg (5.5lbs) (BL1830, BL1840) 2.2kg (4.9lbs) (BL1815N)	2.5kg (5.5lbs)	2.6kg (5.8lbs) (BL1830, BL1840) 2.4kg (5.3lbs) (BL1815N)

**Standard Equipment :** Fast Charger, Battery Cartridge, Jig Saw Blade Assortment, Cover Plate, Dust Nozzle (for European countries only), Anti-Splintering Device, Hex Wrench

\*Weight according to EPTA-Procedure 01/2003

Items of standard equipment and specifications may vary by country or area.



**Cordless Jig Saw**  
DJV141, DJV142   
DJV181, DJV182



# As powerful as corded Jigsaws, yet lightweight

**DJV142, DJV182**  
Top handle type

**DJV141, DJV181**  
Barrel handle type



**Makita Corporation**

3-11-8 Sumiyoshi-cho, Anjo, Aichi, 446-8502 Japan

PRINTED IN JAPAN BD-AD

# Excellent Performance Provides High Productivity

## Powerful BLDC motor

provides higher operating efficiency than that of the current BLDC motor, increasing max output power and work amount on a single full battery charge.



### Barrel handle type

DJV181 DJV141



### Top handle type

DJV182 DJV142

# Compact, Lightweight design

## Barrel handle type



2.5kg (DJV181) / 2.4kg (DJV141)

DJV181; with battery BL1840 DJV141; with battery BL1440

## Electronic push button switch


located on the both sides of Housing

### How to start the machine;

Press button A once\*1 and the machine will be turned into standby mode and LED job light will turn on. Then press button B within 10 seconds\*2 and the machine will start.

### How to stop the machine;

Press button A to stop and the machine will be automatically locked in off mode. Press button 2 to stop in standby mode.

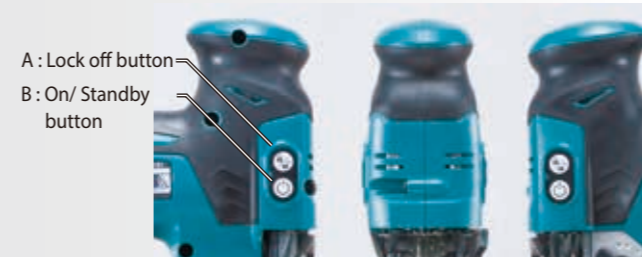

\*1: If button A is pressed once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.

\*2: If no button is pressed for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.

Note: Button B is disabled when the machine is locked in off mode.

## Top handle type



2.6kg (DJV182) / 2.5kg (DJV142)

DJV182; with battery BL1840 DJV142; with battery BL1440

## Trigger switch with lock-on button

provides the same excellent operability as AC models

### How to start the machine;

Press Lock-off button once\*1 and the machine will be turned into standby mode and LED job light will turn on. Then pull the trigger of Switch within 10 seconds\*2 and the machine will start. For continuous operation, pull the trigger then push in Lock-on button.

### How to stop the machine;

Release the trigger of Switch to stop the machine. When the machine is locked in continuous operating mode, pull the trigger fully then release it.



\*1: If you press Lock-off button once again within 10 seconds, LED job light will turn off and the machine will be automatically locked in off mode.

\*2: If Lock-off button is not pressed nor the trigger of Switch is not pulled for 10 seconds after LED job light is turned on, the light will automatically turn off and the machine will be automatically locked in off mode.

Note: Trigger switch is disabled when the machine is locked in off mode.

## LED job light (twin-light)

for illuminated operation



## Toolless blade clamp

Blade can be attached with single action - simply by pushing it into the clamp;  
can be also removed easily with single action - simply by turning large lever

