Cordless Pruning Saw

Battery Powered Pruning Shears — Cordless Earth Auger —

DUC150



DUP362



DDG461 BL ADT XPI



Battery Powered Wheelbarrow

















Accessories

Shear blade U set

Replacement upper blade for Pruning shears



Shear blade L set

Replacement lower blade for Pruning shears



45 min

55 min

110 min

130 min

Dresser stone set

Dresser stone for Shear blade sharpening



Holster

Storage and carrying of the machine



MAKPAC TYPE3

For smart organization and easy transportation of power



Charging Time

DC18RC DC18SD tools and accessories BL1815N 1.5Ah 30 min 15 min **24** min BL1820B 2.0Ah 45 min BL1830B 3.0Ah **22** min **60** min BL1840B 4.0Ah 36 min **90** min

BL1850B 5.0Ah

BL1860B 6.0Ah

Battery Powered Pruning Shears DUP180

Anti-restart function S Torque Limiter Carrying Case

Max cutting: 30 mm (1-3/16") 2.5 m/s² or less 70 dB(A) or less Capacity Vibration level Sound pressure 296 x 40 x 99 mm (11-5/8 x 1-9/16 x 3-7/8") 0.68 kg (1.5 lbs.) Net weight*

*Without standard equipment such as battery, battery adapter, harness, and controller for operation

Standard Equipment:

Oil spray, Hex wrench, Socket wrench, Dressing stone, Holster, Battery, Charger

The weight according to EPTA-Procedure 01/2014 is shown in the table.

Makita Corporation

3-11-8 Sumiyoshi-cho, Anjo, Aichi, 446-8502 Japan PRINTED IN JAPAN 202311



Battery Powered Pruning Shears DUP180





*When cutting ø15mm branches of Japanese cypress, with BL1860B battery









Battery adapter

Cord length: 1.4m



The battery is separated by the adapter to reduce hand and arm fatigue.

Select from four angles to match branch thickness.



Blade opening angle adjustme button

Main power button











Thick branch





Work amount on a full battery charge

When cutting ø15mm branches of Japanese cypress

about **8,000** pcs

Slim and Lightweight design

The use of BL Coreless motor*1 allows for reduction in the grip diameter and weight to reduce user's fatigue from pruning.

*1 BL motor without iron core on which copper coil wire is wound





Standby mode

To turn off the tool, pull and hold the switch trigger for more than 3 seconds to close the shear blades, then release the switch trigger, and then press the main power button.



Adjustment of blade overlap when closed

(by pressing and holding Blade opening angle adjustment button for 3 seconds or more when fully closed)



External oil port

Lubrication oil can be injected without disassembling the blades.

